



CLEARMIRROR



IMPORTANT INSTALLATION NOTE: SEAL MIRROR EDGES

Prep The Wall And Seal The Mirror Edges With Mastic

Clean the area and seal with a good quality, environmentally safe, acrylic sealer (Gunther Prime-N-Seal). When applying mastic to secure mirror to wall, also run a continuous bead of mastic around the **entire perimeter**. This provides a moisture seal for grout sealant, glass cleaners and other chemicals.

We strongly encourage only soap and water be used to clean mirror and tile near the mirror.

Prevent Mirror From Turning Black


ClearMirror shower mirrors are made from mirror produced to the highest standards from American manufacturers. However, if chemicals other than mastic come in contact the mirror backing, it could turn the mirror black.

MIRRORS THAT TURN BLACK AFTER INSTALLATION ARE NOT COVERED UNDER WARRANTY!

The only chemical that should contact the mirror backing is mirror mastic. Never use silicone. Mastic will not harm the heater. Use as needed to safely secure the mirror.

Apply continuous mastic bead around the entire edge of mirror back to create a moisture seal.

Apply mastic on the open mirror surface and to heater for adhesive.

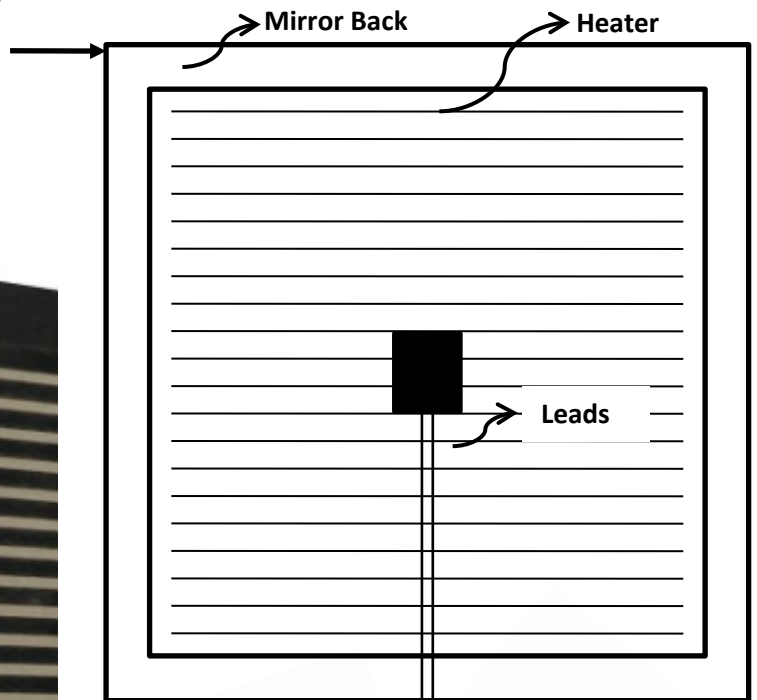

Brace The Mirror – Mastic Times Vary

Tape or brace mirror in place until the mastic and grout are completely dry.

Use Premium Mirror Mastic For Best Results

Use **Gunther Premier Plus Mirror Mastic** or **Kerdi Fix Adhesive**. Available from your local mirror/glass/tile specialist or online through Amazon or CR Laurence. Both products have a shelf life, so we are not able to provide it with your shower mirror. Other premium mirror mastics will work but Gunther and Kerdi Fix are recommended.

NewHome Bath & Mirror

425 Weir Drive • Woodbury, MN 55125 • 651.251.9036